

Instructions for Electronic Timer TTR-336 & TTR-337

Name: One-Week Electronic Timer

Specifications:

Temperature Range: 0-35°C

Rated voltage: 220 /50Hz - 240V/50Hz AC

Load: 3500W

Key Button

Clock; Timer; Day; h+ (setting the hour); m+ (setting the minutes); Manual override; Reset.


Tips:

1. Before starting the program, the timer should be charged for at least 5 minutes as the inbuilt battery may be of no battery.
2. Before setting the program, press the key button "reset", to clear the memorize data for the new instructions.
3. After the program is made, please insert the timer to the plug. Then connect the Electric appliance to the Timer.
4. The On and Off can be set eight times each day, which can be set as follows:
 - First Option: Sunday
 - Second Option: From Monday to Friday (Sunday)
 - Third Option: Saturday and Sunday (weekend)
 - Fourth Option: From Monday to Saturday (working days)
 - Fifth Option: Monday, Wednesday, Friday.
 - Sixth Option: Tuesday, Thursday, Saturday
 - Seventh Option: From Monday to Wednesday
 - Eighth Option: From Wednesday to Saturday
5. 12-hour system and 24-hour system are optional

Setting the Programs


1. Set the present date and time
Note: if there is no number of the time, the timer will not work. So although it is 0 hour and 0 minute, they must be set on the screen
(1) Please press the key button "clock"

- (2) Then press the key button “Day” until the right date is displayed on the screen. The screen is displayed as the right photo shows:
- (3) Press the key button “clock”, at the same time, press the key button “h+” and “m+” until the right time is displayed. The number of the time on the screen will roll quickly if the key buttons are pressed still.
- (4) Loose the key button “clock”, the time has been set. The screen is displayed as the right photo shows:

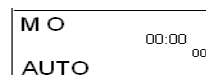

Timer Functions settings

- (1) Press the key button “Timer”, and then loose, the screen is displayed as the right photo shows:
- (2) Press the key button “Day” till the first number or the second number of the date is displayed on the screen.
- (3) Press the key button “h+” and “m+” to set the lighting or the working time of the electric devices. The screen is displayed as the right photo shows:
- (4) Press the key button “Timer” again, comes to the setting of the second timer settings
- (5) Every program of the timer settings can be made as the above four procedures.
- (6) After the setting is done, press the key button “clock” to confirm. And the screen displays the present time.

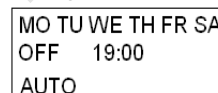

Check the programs

Press the key button “Timer” once, the screen displays the first set program. Press the key button “Timer” twice, the screen displays the second set program. Press eight times on the key button “Timer” to check all the eight set programs.

Revise the time of the programs

In the set program, press the key button “Timer” still until the timer you want has been made. Use the key button “Day, h+, m+” to make necessary changes. After this is done, press the key button “Clock” to confirm.

Pressing the key button “Reset” will cancel all the programs

Manual operation

Press the key button “Manual override”, LCD screen displays ON or OFF.